

# AIRSTREME

## • User's Instructions •

The **Quick Reference Card** provides a summary of Airstreme's **AS-120x-PP & AS-120x-BP** main functions and a quick overview of the operations accessible from your topside keypad.

### On/Off key:



Press **On/Off** key once to start motor in Constant Mode. Press a second time to turn motor off. Turning the motor off resets its settings.

A built-in timer shuts motor off after 20 minutes, unless manually turned off first.

### Mode key:



Successive presses of the **Mode** key when motor is on changes its massage mode.

Press **Mode** key to go into Wave Mode. Press a second time to go into Pulse Mode. A third press will revert to Constant Mode.

**Constant Mode:** the motor is on without variation of speed.

**Wave Mode:** slowly varies motor speed from off to its maximum speed and viceversa.

**Pulse Mode:** 1,5 seconds at off, then 1,5 seconds at maximum speed and back to off for 1,5 seconds.

### Setting motor speeds:

**Up/Down** keys are used to set the desire setting.



Press and hold the **Up** key to increase the motor speed.



Press and hold **Down** key to decrease the motor speed.

### Optional water level sensor (WR)

If your system is equipped with an optional water level sensor:

- **Units equipped with Pump: (AS-120x-PP)**

If water falls below the water sensor (WR) while pump is on, the WR will turn the system off.

- **Units equipped with Blower: (AS-120x-BP)**

If water falls below the water sensor (WR) while blower is off a purge is initiated after a 15 minutes idle period to dry the air channels.

### Automatic Purge:

**\*(only available with the model AS-120x-BP)**

After the bath has been turned off manually or by the built-in timer a purge is initiated, after a 15 minutes delay, to dry the air channels. The purge is predetermined by factory settings and consist of the activation of the blower for 1 minute.

### Daily Purge:

**\*(only available with the model AS-120x-BP)**

Holding the **On/Off** key for 5 seconds, when the blower is off activates the daily purge. The blower then will start every day at the same time, for a preset period of time, to dry air channels. Once the daily purge is activated, in order to let you know that this feature has been enabled the blower will come on for 1 second, turn off for 2 seconds and come on for 1 second and finally turn off.