




Quick Start Card


in.ye-3 & in.ye-5™ North American version

1- Connect all outputs & keypads

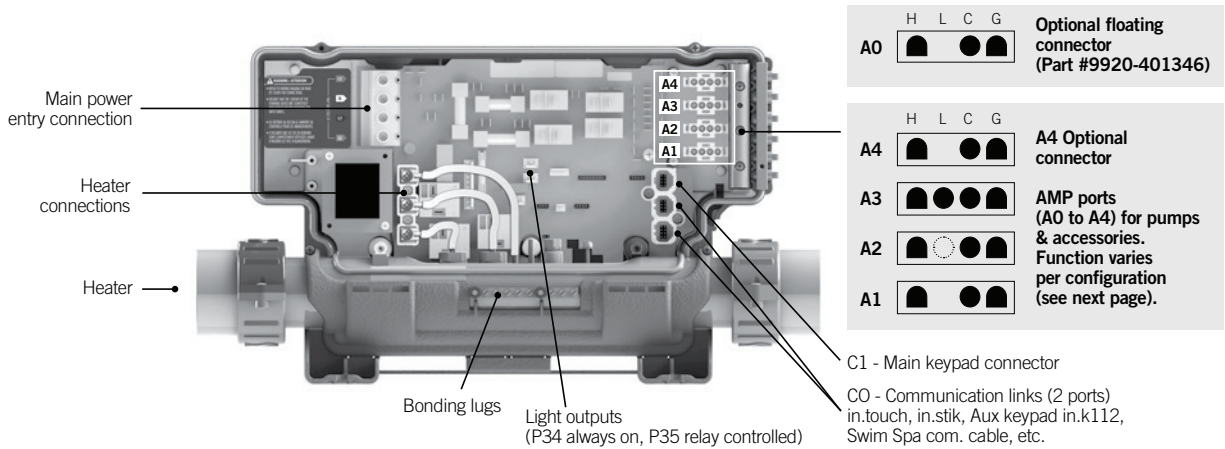


2- Connect the main power

2.a- Electrical wiring

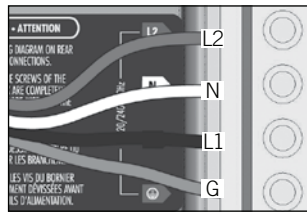

For 240 V (4 wires)


Connect wiring of the electrical service box GFCI. Neutral wire is mandatory.

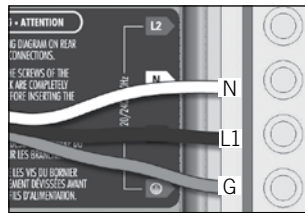

For 120 V (*3 wires)


* If connected to a 3 wire system, any 240 V components will not work.

2.b- Heater & pump/accessories voltage

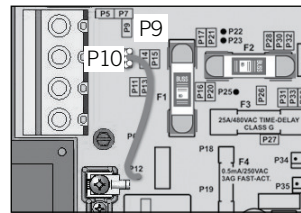

Heater voltage

Verify BROWN common wire connection to tab:
P9 - 240 V (default)
P10 - 120 V

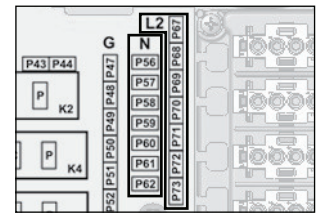


Pumps & accessories voltage


Verify each WHITE common wire connection to tab:
N - 120 V (default)
L2 - 240 V pump/acc.

WARNING! All connections must be made by a qualified electrician in accordance with the national electrical code and any state, provincial or local electrical code in effect at the time of the installation. This product must always be connected to circuit protected by a Ground Fault Circuit Interrupter (GFCI).

3- Select spa configuration (if prompt on startup)

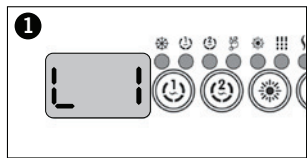

At first startup the keypad display will show **Lx** or **LLx**, where « x » representing the config. number. Some spa packs come with a pre-selected config. and you may skip this step if your system automatically starts up¹.

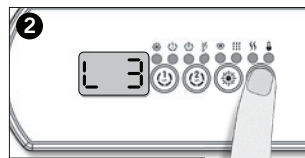

Use the **Up/Down** key to choose the new low level configuration number.



Press the **Program**² key to confirm the selection.

For more information, see our website: www.geckoalliance.com

¹ Note: To re-enter the low level selection menu, hold the Pump 1 key for 30 seconds.

Note: For the Color keypad series, select **Settings** menu, go into **Electrical config** and choose the appropriate Low level.

² Note: If the keypad does not have a Program or Filter key, use the Light key instead.

4- Select breaker current



Press and hold the **Program** key for 20 seconds until you access the breaker setting menu.

Note: For the Color keypad series, select **Settings** menu, go into **Electrical config** and choose Input current.



The values displayed by the system correspond to **80%** of the maximum amperage capacity of the GFCI.

For more information, see our website: www.geckoalliance.com

GFCI	b
60 A	48 A
50 A	40 A
40 A	32 A
30 A	24 A
20 A	16 A
15 A	12 A

(10 to 20 A dedicated to 120 V)



Use the **Up/Down** key to select the desired value. Then press the **Program** key to confirm the selection.

Note: If the keypad does not have the Program or Filter key, use the Light key instead.



Configuration selection chart

Software #355, rev. 002

Standard config. #	Pump 1	Pump 2	Pump 3	Pump 4	Pump 5	Blower	Circ. Pump (CP) configuration	Ozone (O3) configuration ¹	Filter cycle daily	Heater
1	2SP (A3) 12A-4A	-	-	-	-	-	-	(A1)	2 * 2 hours with P1L	Pump 1
2	2SP (A3) 12A-4A	-	-	-	-	-	(A1) 1A	(A4)	2 * 6 hours with CP	CP
3	2SP (A3) 12A-4A	1SP (A2) 12A	-	-	-	-	-	(A1)	2 * 2 hours with P1L	Pump 1
4	2SP (A3) 12A-4A	1SP (A2) 12A	-	-	-	-	(A1) 1A	(A4)	2 * 6 hours with CP	CP
5	2SP (A3) 12A-4A	-	-	-	-	X (A4) 8A	-	(A1)	2 * 2 hours with P1L	Pump 1
6	2SP (A3) 12A-4A	-	-	-	-	X (A4) 8A	(A1) 1A	(A2)	2 * 6 hours with CP	CP
7 ⁴	2SP (A3) 12A-4A	1SP (A2) 12A	-	-	-	X (A4) 8A	-	(A1)	2 * 2 hours with P1L	Pump 1
8	2SP (A3) 12A-4A	1SP (A2) 12A	-	-	-	X (A4) 8A	(A1) 1A	-	2 * 6 hours with CP	CP
9	2SP (A3) 12A-4A	2SP (A2) 12A-4A	-	-	-	-	-	(A1)	2 * 2 hours with P1L	Pump 1
10	2SP (A3) 12A-4A	2SP (A2) 12A-4A	-	-	-	-	(A1) 1A	-	2 * 6 hours with CP	CP
11	2SP (A3) 12A-4A	2SP (A2) 12A-4A	-	-	-	X (A1) 8A	-	-	2 * 2 hours with P1L	Pump 1
12	2SP (A3) 12A-4A	2SP (A2) 12A-4A	-	-	-	X (A1) 8A	(A0) ² 1A	-	2 purges CP always on	CP
13	2SP (A3) 12A-4A	1SP (A2) 12A	1SP (A4) 10A	-	-	-	-	(A1)	2 * 2 hours with P1L	Pump 1
14	2SP (A3) 12A-4A	1SP (A2) 12A	1SP (A4) 10A	-	-	-	(A1) 1A	-	2 * 6 hours with CP	CP
15	2SP (A3) 12A-4A	1SP (A2) 12A	1SP (A4) 10A	-	-	X (A1) 8A	-	-	2 * 2 hours with P1L	Pump 1
16	2SP (A3) 12A-4A	1SP (A2) 12A	1SP (A4) 10A	-	-	X (A1) 8A	(A0) ² 1A	-	2 purges CP always on	CP
17	2SP (A3) 12A-4A	2SP (A2) 12A-4A	1SP (A1) 10A	-	-	-	-	-	2 * 2 hours with P1L	Pump 1
18	1SP (A3) 12A	-	-	-	-	-	(A1) 1A	(A4)	2 * 6 hours with CP	CP
19	1SP (A3) 12A	1SP (A2) 12A	-	-	-	-	(A1) 1A	(A4)	2 * 6 hours with CP	CP
20	1SP (A3) 12A	1SP (A2) 12A	1SP (A4) 10A	-	-	-	(A1) 1A	(P43 tab) ³	2 * 6 hours with CP	CP
21	1SP (A3) 12A	1SP (A2) 8A	1SP (A4) 10A	1SP (A1) 10A	-	-	(A0) ² 1A	(P43 tab) ³	2 purges CP always on	CP

Swim Spa config.

51	1SP Master (A3) 12A	1SP Master (A2) 12A	1SP Slave (A3) 10A	1SP Slave (A2) 10A	-	X Slave (A4) 8A	Master (A4) 1A	Master (A1)	2 * 6 hours with CP	CP
52	2SP Master (A3) 12A-4A	1SP Master (A2) 12A	1SP Slave (A3) 10A	1SP Slave (A2) 10A	-	X Slave (A4) 8A	-	Master (A1)	2 * 2 hours with P1L	Pump 1
53	1SP Master (A3) 12A	1SP Master (A2) 12A	1SP Slave (A3) 10A	1SP Slave (A2) 10A	1SP Slave (A1) 10A	X Slave (A4) 8A	Master (A4) 1A	Master (A1)	2 * 6 hours with CP	CP
54	2SP Master (A3) 12A-4A	1SP Master (A2) 12A	1SP Slave (A3) 10A	1SP Slave (A2) 10A	1SP Slave (A1) 10A	X Slave (A4) 8A	-	Master (A1)	2 * 2 hours with P1L	Pump 1

Glossary

(P1L)	Pump 1 Low speed
(CP)	Circulation Pump Installed
X	High speed only
1SP	High and Low speed
2SP	Output connector
(OUT, AMP, Relay, Tab)	Current: High - Low speed
13A-4A	

¹ When the Ozonator is not controlled by a relay, it can be tied to Pump 1 Low speed or Circ. Pump.

² Circ. pump is connected to a Direct fused outlet. Pump will always be on and may overheat if oversized pump is used.

³ This accessory does not have its own AMP connector. Rewire A0 if not used or order extra AMP connector 9920-401346 (Black wire to P43 tab on the board, Green to any G tabs and white to any N tabs for 120 V accessory or any L2 tabs for 240 V).

⁴ Configuration 7 is preselected from factory.

